

User Guide

Operating and Service Manual



Gyro 525 / 600 / 1014 Semi Automatic Gyroscopic Mixer

Keep this manual within reach of the machine

USER'S MANUAL

Gyroscopic I Mixer

GYRO 525/600/1014 >

Version Phoenix 2.0 _ APR 2025

© COPYRIGHT 2008, Phoenix Mixer India Pvt. Ltd. all rights reserved.

No part of this manual may be reproduced in any form, or by any means, electronic or mechanical, including photocopying and recording, without prior written permission of Phoenix.

Information in this manual is subject to change without notice and does not represent a commitment on the part of Phoenix.

Unless otherwise indicated, all references to companies, names, data and addresses used in the screens and / or examples are purely coincidental and serve only to clarify the use of the Phoenix Mixer.

Phoenix shall not be liable for technical or editorial errors or omissions made herein; nor for incidental or consequential damages resulting from the performance or use of this material.

If you require additional copies of this manual or further technical information about it, please write to:

Phoenix Mixer India Pvt. Ltd.
Plot No 7, College Road, Vadkun, Dahanu Road- 401602
Dist: Palghar, Maharashtra, INDIA
Phone: + 91-9422309771
www.phoenixmixer.com

An ISO 9001:2015 Certified Company

Printed in India

INDEX >

➤ SAFETY INSTRUCTIONS.....	3
➤ INTRODUCTION.....	4
➤ TECHNICAL SPECIFICATIONS.....	5-8
➤ WARRANTY	9
➤ SAFETY SPECIFICATIONS.....	10-13
➤ INSTALLATION.....	14
➤ CONTROLS.....	15
➤ OPERATIONS.....	16-18
1. TURN ON THE MACHINE	
2. LOADING THE CAN	
3. MIXING	
➤ PREVENTIVE MAINTENANCE	19-23
➤ MAINTENANCE AND TROUBLESHOOTING	24-26
➤ SCHEMATIC DIAGRAM	27
➤ REFERENCE LEGEND	28



1. SAFETY INSTRUCTIONS

- **Read safety instruction carefully and follow them for your own protection.**

This Product is used on a nominal 110 or 220 Volt circuit, as shown on the Name plate. Connect the Product to an outlet having the same configuration as the Plug. Wear safety Shoes when installing or relocating the machine. Make sure the machine stands securely. Keep your place clean & tidy. There is risk of accidents at untidy workplace.

- **Close the Machine when it is not being used.**

Machine shall be connected to dedicated electrical circuit- No other device shall be connected to this circuit.

This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This product shall be connected to a dedicated electrical circuit – no other devices shall be connected to this circuit.

Removal of the plug from the outlet is the means for isolating the mixer from the power supply. Ensure that the mixer is installed with the plug easily accessible to the operator.

This product is designed to operate only when the door is closed. **DO NOT ATTEMPT TO ALTER ELECTRICAL INTERLOCK MECHANISM.**

In case of emergency, press the Red Emergency Stop button.

- **Do not overload the machine. Check that the weight and dimension of the mixing Cans are suitable.**

Use only undamaged and sturdy Mixing Can, if you don't, the container may burst.

Never lift large and heavy Can into the machine.

The mixing Can must be closed completely.

- **Make sure that the mixing Can sits in central position on mixing table. Secure the container handle with rubber bands or adhesive tape.**

Take good care of the machine. Make sure that the moving parts move smoothly and without restriction. Follow the maintenance instruction.

- **Do not use high pressure equipment to clean the machine.**

Make sure that the safety devices work properly and are clean.

- **Do not use the machine if the door or the plastic shutter is damaged. If the shutter strip is broken, do not reach into the interior. There is risk of injury from rotating components.**

- **Do not start the machine with shutter open. Pull out power plug! There is high risk of accidents!**


Before switching on the machine after maintenance work, check that no spanners or setting tools are left inside the machine.

Examine the machine for signs of damage. Check regularly that all parts are in good working condition. Have repairs carried out only by the manufacturer or an approved specialist.

Trained and authorized personnel shall use this product.

2. INTRODUCTION


GYRO 525/600/1014 is a revolutionary mixer, which is ideal for all your mixing requirements. GYRO 525/600/1014 Mixer performs gyroscopic action, which enables in effective mixing, uniform blending and making homogeneous mixer. GYRO 525/600/1014 mixer is specifically designed for point-of-sale color mixing applications as well as for semi-industrial applications. This mixer is ideal for mixing small, medium, large Cans up to 30 - 35kgs. GYRO 525/600/1014 is user friendly. GYRO 525/600/1014 has been designed to meet the demands of the retail market. The dimension of the machine makes it versatile and suitable for use in all environments. The unique design results in reduced maintenance and in color mixing at the lowest cost per liter produced. GYRO 525/600/1014 is a rugged and reliable mixer which exhibits the qualities of a strong and sturdy engineering product and low maintenance

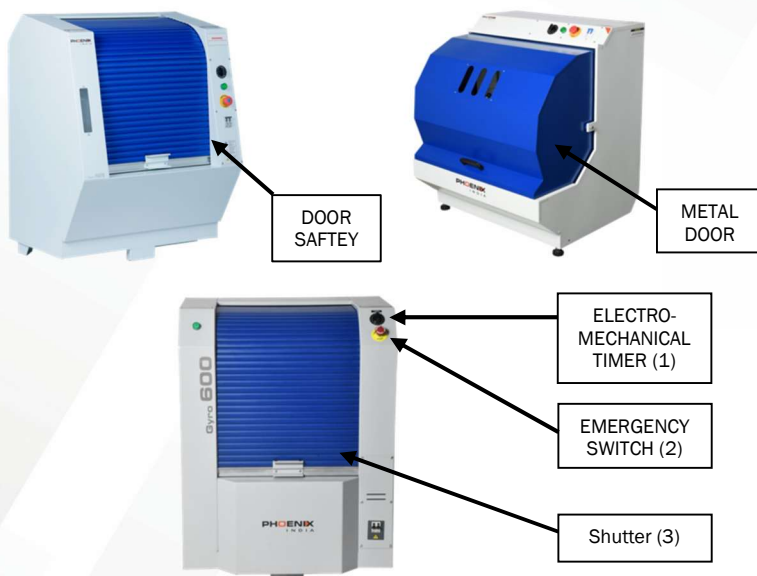


Phoenix shall not be liable for any damage or injury incurred by non-compliance with these regulations, or by not taking the usual and accepted precautions in handling, operation or repair, even if not expressly stated in this manual.


3. TECHNICAL SPECIFICATIONS

FEATURES	GYRO 525 STD	GYRO 525 SND
MAXIMUM WEIGHT	35 KG	35 KG
CAN HEIGHT	70 - 410 MM	70 - 410 MM
CAN DIAMETER	60 - 275 MM	60 - 275 MM
OVAL & MULTIPLE CANS	OPTIONAL	OPTIONAL
CAN LOADING	MANUAL	MANUAL
CAN MIXING (MIN.-MAX.) 1 LIT.	1 - 3 NOS	1 - 3 NOS
CAN MIXING (MIN.-MAX.) 4 LIT.	1 NO	1 NO
CAN MIXING (MIN.-MAX.) 10 LIT.	1 NO	1 NO
CAN MIXING (MIN.-MAX.) 20 LIT.	1 NO	1 NO
STIRRER VELOCITY	SINGLE SPEED FOR ALL CANS	SINGLE SPEED FOR ALL CANS
CAN HOLDER ASSEMBLY SPEED	135 RPM	135 RPM
CAN SPIN SPEED	220 RPM	220 RPM
CLAMPING	MANUAL	MANUAL
DOOR	PLASTIC SHUTTER WITH METAL BARS	PLASTIC SHUTTER WITH METAL BARS
RATED POWER	0.5 HP, 1PH, 220 V - 50 Hz, 1425 RPM	0.5 HP, 1PH, 220 V - 50 Hz, 1425 RPM
MAXIMUM NOISE LEVEL	< 70 dB	< 70 dB
POWER SUPPLY	220 V - 50 Hz	220 V - 50 Hz
POWER SUPPLY (OPTIONAL)	220 - 110 V /60 Hz	220 - 110 V /60 Hz
TIMER	MECHANICAL (UPTO 5 MIN.)	MECHANICAL (UPTO 5 MIN.)
LOCKING DOOR DEVICE (Safety Doors/w)	N/A	AVAILABLE
ELECTRONIC	N/A	BOARD
GYROSCOPIC MOTION	COUNTERCLOCKWISE	COUNTERCLOCKWISE
EMERGENCY SWITCH	AVAILABLE	AVAILABLE WITH KEY
TRANSPORT ROLLER (CUSTOMER WHEEL)	OPTIONAL	OPTIONAL
MACHINE DIMENSION (W X D X H)	840 X 680 X 1060 MM	840 X 680 X 1060 MM
NET WEIGHT	130 KG	130 KG
SHIPPING DIMENSION (W X D X H)	915 X 736 X 1245 MM	915 X 736 X 1245 MM
GROSS WEIGHT	145 KG	145 KG





FEATURES	GYRO 600 STD	GYRO 600 SND
MAXIMUM WEIGHT	35 KG	35 KG
CAN HEIGHT	70 - 410 MM	70 - 410 MM
CAN DIAMETER	60 - 275 MM	60 - 275 MM
OVAL & MULTIPLE CANS	OPTIONAL	OPTIONAL
CAN LOADING	MANUAL	MANUAL
CAN MIXING (MIN.-MAX.) 1 LIT.	1 - 3 NOS	1 - 3 NOS
CAN MIXING (MIN.-MAX.) 4 LIT.	1 NO	1 NO
CAN MIXING (MIN.-MAX.) 10 LIT.	1 NO	1 NO
CAN MIXING (MIN.-MAX.) 20 LIT.	1 NO	1 NO
STIRRER VELOCITY	SINGLE SPEED FOR ALL CANS	SINGLE SPEED FOR ALL CANS
CAN HOLDER ASSEMBLY SPEED	150 RPM	150 RPM
CAN SPIN SPEED	225 RPM	225 RPM
CLAMPING	MANUAL	MANUAL
DOOR	PLASTIC SHUTTER WITH METAL BARS	PLASTIC SHUTTER WITH METAL BARS
RATED POWER	1 HP, 1PH, 220 V - 50 HZ, 1425 RPM	1 HP, 1PH, 220 V - 50 HZ, 1425 RPM
MAXIMUM NOISE LEVEL	< 70 DB	< 70 DB
POWER SUPPLY	220 V - 50 HZ	220 V - 50 HZ
POWER SUPPLY (OPTIONAL)	220 - 110 V /60 HZ	220 - 110 V /60 HZ
TIMER	MECHANICAL (UPTO 5 MIN.)	MECHANICAL (UPTO 5 MIN.)
LOCKING DOOR DEVICE (SAFETY DOOR S/W)	N/A	AVAILABLE
ELECTRONIC	N/A	BOARD
GYROSCOPIC MOTION	COUNTERCLOCKWISE	COUNTERCLOCKWISE
EMERGENCY SWITCH	AVAILABLE	AVAILABLE WITH KEY
TRANSPORT ROLLER (CUSTOR WHEEL)	OPTIONAL	OPTIONAL
MACHINE DIMENSION (W X D X H)	840 X 670 X 1075 MM	840 X 670 X 1075 MM
NET WEIGHT	145 KG	145 KG
SHIPPING DIMENSION (W X D X H)	915 X 736 X 1245 MM	915 X 736 X 1245 MM
GROSS WEIGHT	160 KG	160 KG





FEATURES	GYRO 1014 STD	GYRO 1014 SND
MAXIMUM WEIGHT	35 KG	35 KG
CAN HEIGHT	70 - 410 MM	70 - 410 MM
CAN DIAMETER	60 - 300 MM	60 - 300 MM
OVAL & MULTIPLE CANS	OPTIONAL	OPTIONAL
CAN LOADING	MANUAL	MANUAL
CAN MIXING (MIN.-MAX.) 1 LIT.	1 - 3 NOS	1 - 3 NOS
CAN MIXING (MIN.-MAX.) 4 LIT.	1 NO	1 NO
CAN MIXING (MIN.-MAX.) 10 LIT.	1 NO	1 NO
CAN MIXING (MIN.-MAX.) 20 LIT.	1 NO	1 NO
STIRRER VELOCITY	SINGLE SPEED FOR ALL CANS	SINGLE SPEED FOR ALL CANS
CAN HOLDER ASSEMBLY SPEED	135 RPM	135 RPM
CAN SPIN SPEED	220 RPM	220 RPM
CLAMPING	MANUAL	MANUAL
DOOR	METAL DOOR	METAL DOOR
RATED POWER	0.5 HP, 1PH, 220 V - 50 Hz, 1425 RPM	0.5 HP, 1PH, 220 V - 50 Hz, 1425 RPM
MAXIMUM NOISE LEVEL	< 70 dB	< 70 dB
POWER SUPPLY	220 V - 50 Hz	220 V - 50 Hz
POWER SUPPLY (OPTIONAL)	220 - 110 V /60 Hz	220 - 110 V /60 Hz
TIMER	MECHANICAL (UPTO 5 MIN.)	MECHANICAL (UPTO 5 MIN.)
LOCKING DOOR DEVICE (Safety Door s/w)	N/A	AVAILABLE
ELECTRONIC	N/A	BOARD
GYROSCOPIC MOTION	CLOCKWISE	CLOCKWISE
EMERGENCY SWITCH	AVAILABLE	AVAILABLE WITH KEY
TRANSPORT ROLLER (CUSTOR WHEEL)	OPTIONAL	OPTIONAL
MACHINE DIMENSION (W X D X H)	865 X 775 X 1005 MM	865 X 775 X 1005 MM
NET WEIGHT	135 KG	135 KG
SHIPPING DIMENSION (W X D X H)	965 X 864 X 1092 MM	965 X 864 X 1092 MM
GROSS WEIGHT	150 KG	150 KG





EN 292 Part 1 and 2: 1991	Safety of Machinery – Basic concepts, general Principles for design
EN 418: 1992	Safety of Machinery – Emergency stop equipment, Functional aspects
EN60204 Part 1: 1997	Safety of machinery – Electrical equipment of Machines -Specifications for general requirements
EN 954-1: 1996	Safety of Machinery – Safety related parts of control Systems- Part 1: General principles for design
EN 1088: 1995	Safety of machinery-Interlocking devices associated with guards
EN 294: 1992	Safety of machinery – Safety distances to prevent danger zones being reached by the upper limbs.
EN 953: 1997	Safety of machines – Guards-General requirements for the design and construction of fixed and movable for coating materials
PrEN 12757-1	Mixing machinery for coating materials

Materials used by Phoenix to manufacture the machine doesn't undergo corrosions or deteriorations (They are compatible) with the paints which must be mixed.

4. WARRANTY

LIMITED WARRANTY: Phoenix warrants each unit manufactured to be free of defects in material and workmanship for a period of twelve months. This warranty applies to single-shift operation and is counted from the date of initial start-up. It covers all defects arising from faulty material or workmanship.

Please Note that all warranty claims must be accompanied by the original delivery note or initial start – up report.

All essential warranty repair work must be carried out by trained service engineers or by third parties' authorized by Phoenix. Unauthorized repair may render the warranty null and void.

Please return any defective parts or machines carriage-paid to our factory. Phoenix reserves the right to decide on whether cost-free parts replacement is applicable. Parts and labor covered by the warranty will be supplied free of charge. The warranty does not cover travel cost, expenses or possible overnight accommodation resulting from warranty repairs carried out off our premises.

Any other responsibility, with reference to damage claims, including foregone profit or other material losses on the part of the customer, is expressly excluded.

Warranty and liability claim for personal, or material damage are excluded if attributable to one or more of the following causes.

The part unit shall be returned with transportation charges prepaid. If the fault has been caused by misuse or abnormal conditions of operation, repairs will be billed at a normal cost. In this case, an estimate will be submitted before work starts, if requested.

Always include serial number in any correspondence concerning the part unit.

The warranty expires: Twelve month after date of invoicing

- Operation of the machine with defective safety or protection device.
- Incorrect operation of the machine, as define in the operation instructions.
- Failure to observe the instruction in the operating manual with respect to set up, initial start-up, operation and maintenance of the machine.
- Fault and damage caused by dirt or incorrect cleaning schedules, with reference to leaks and damaged Cans.
- Unauthorized structural modification to the machine.
- Incorrect monitoring of parts subject to wear and consumables.
- Unauthorized repairs or fitting of non-original parts.
- Damage caused by the impact of foreign bodies or majeure force.

We reserve the right to make amendments because of ongoing advance in the technical field.


5. SAFETY SPECIFICATIONS


Compliance with safety requirements:


This mixer must be used and serviced by authorized and trained personnel only. Improper use or servicing may result in dangerous situations or accidents.


Risk to personnel is possible in two areas:

Operator area
└─ Maintenance area

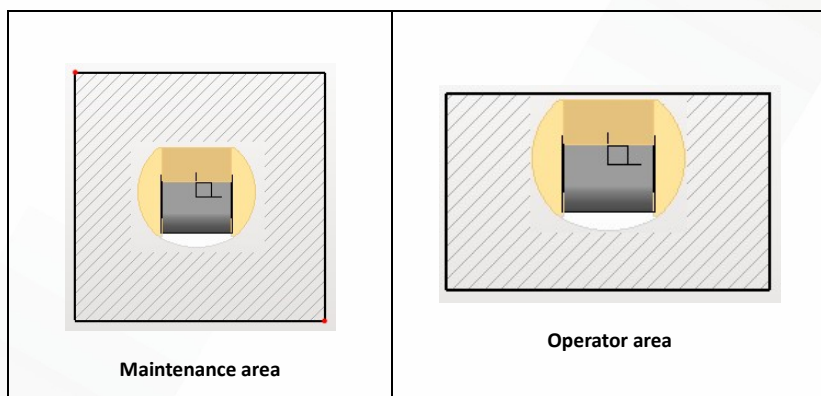

	<p>THIS EQUIPMENT MUST BE GROUNDED. Attention!!!</p> <p>Connect this product to a dedicated electrical circuit – no other devices shall be connected to this circuit. Do not use extension cords to connect this product.</p>
---	---

	<p>Attention!!!</p> <p>Only trained personnel shall be permitted access to the electrical wiring within the machine. DO NOT USE THIS PRODUCT IF THE BACK PANEL IS NOT IN PLACE.</p>
---	---



The machine is equipped with a power supply cable having the following specifications:

Length : 8 FT
Size : 16 AWG


The machine shall be connected to a dedicated, grounded circuit, protected by a 15 A circuit breaker. All wiring shall be in accordance with local codes

Important:

The power supply cable conductors are color-coded as follows:

GREEN or GREEN/YELLOW	—	GROUND
WHITE or BLUE/BLACK	—	NEUTRAL
BLACK or BROWN/RED	—	LINE

Service safety rules:

- ▶ Prior to performing any maintenance or inspection of the **GYRO 525/600/1014** disconnect the power plug from the electrical outlet to ensure that the **GYRO 525/600/1014** cannot start unexpectedly.
 - ▶ To prevent injuries to personnel, ensure that all removable panels are in place and properly secured except for any necessary inspections or maintenance.
 - ▶ Do not disable or override any of the installed safety features such as the door lock system.
 - ▶ The **GYRO 525/600/1014** shall be installed in an environment conforming to the appropriate local regulations. A permit issued by the local authority may be required. Keep the number of paint Cans in the immediate area of the machine to a minimum.
 - ▶ Do not store flammable materials or other materials inside the machine. The area in which the **GYRO 525/600/1014** is installed must be kept free of exposed flames, incandescent fixtures or other devices that might create sparks.
 - ▶ It is recommended that a ventilation system, guaranteed to maintain the concentration of dangerous vapors around electrical components at less than 30%, be installed.
 - ▶ When the **GYRO 525/600/1014** is not being used for a period (such as at the end of the workday), ensure that it is empty (no paint Can inside), close the door and unplug the power plug from the outlet.
 - ▶ Ensure that all tools are removed from inside the machine after any maintenance work.
- 

RESIDUAL RISK

Residual risks list for the user:

GYRO 525/600/1014, and its operating and service instructions, have been developed considering the safety of the user and service technician. However, there are situations where risks can be reduced but not eliminated completely.

RISK	PRECAUTION
Injury or crushing during loading and unloading operations.	Use protective gloves and safety shoes during loading and unloading operations.
Abrasions and injuries caused by sharp edges on the Cans being used.	Use protective gloves during loading and unloading operations.
Liquid is leaking from the Cans being used.	Thoroughly clean the operator and maintenance areas. Keep these areas clean.

Personal protection for user:

The GYRO 525/600/1014, when properly operated and maintained, presents minimal risk to the user. However, it is recommended that the user wear suitable protective equipment (safety glasses, safety shoes with non-slip soles and gloves), when loading and unloading the mixer.

General danger situations:

There are no specifically identified hazard related to the operation and maintenance of the GYRO 525/600/1014 (e.g. fire risk, issue or dispersion of dangerous products). However, it is recommended that a powder type fire extinguisher, suitable for electrical fires, be readily accessible.

Safety devices:

The machine is equipped with the following safety devices:

- Emergency Stop Button
- Door Lock and Sensor

Emergency Stop Button

For safety reasons, all users should know the location of the Emergency Stop button, and how to use it.

The RED Emergency Stop push button is located on the Left-Hand control panel on the top front of the mixer – to the left of the door. Pushing the button will immediately cut power to the motor control relay, stopping the motor. To reset the button and restore the mixer to normal operation mode, rotate the button clockwise.

Door Lock and Sensor

The GYRO 525/600/1014 is equipped with a safety device which prevents start up of the mixing cycle when the door is in the open position. It also locks the door in the closed position during the mixing cycle.

6. INSTALLATION

INSTALLATION CONDITIONS:

Before unpacking and installing the **GYRO 525/600/1014** Mixer, please make sure of the following:

- The crate/packaging in which the **GYRO 525/600/1014** was shipped has not been damaged in any way.
- The floor on which the **GYRO 525/600/1014** is to be located is firm and level.
- An electrical receptacle on a properly grounded, dedicated, 15 A, 115 V or 10 A, 230 V circuit is available in the immediate vicinity. The circuit shall be installed in accordance with local codes. The receptacle shall be of a configuration appropriate for the voltage and current rating of the circuit.


INSTALLATION:

It is recommended that, during the installation of the mixer, protective gloves be worn to prevent hand injuries.

- Unpack the **GYRO 525/600/1014** Mixer.
- Ensure the machine has not been damaged in any way.
- Position the mixer in the desired location. It is equipped with rollers to aid in positioning.
- Using the four leveling feet, level the machine, ensuring that all four feet are properly supporting the machine. Lock the leveling legs in place by tightening the jam nuts.

7. CONTROLS

RIGHT HAND CONTROL PANEL – SND

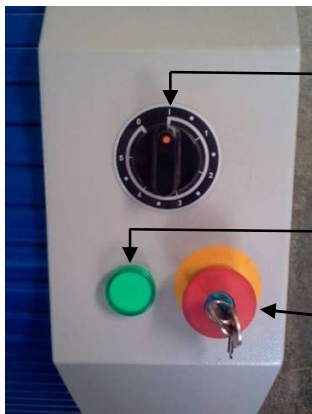


MECHANICAL TIMER SETS
MIXING TIME

LED GREEN-ILLUMINATED
GREEN-WHEN SHUTTER
IS UNLOCKED

EMERGENCY PUSH
BUTTON WITH KEY

RIGHT HAND CONTROL PANEL - STD

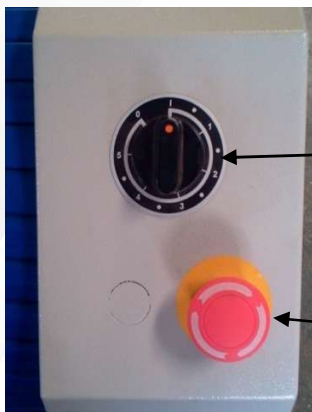

MECHANICAL TIMER SETS
MIXING TIME

EMERGENCY PUSH
BUTTON WITHOUT KEY

8. OPERATIONS

- Put the Single adapter in 1, 4, 10 liters. Can on the Bottom disc (23). Place the Can on the groove area of the adapter. For Cans of 20 liters, place the Can directly on the bottom disc.
- Set the Fine clamping lever (18) of the Clamping bracket (16) in the de-clamp position.
- Turn the two keys of the Locking Plastic (12) in anticlockwise direction to de-clamp the clamping bracket.
- Press the Handle for Clamping Bracket (9) downward by holding the clamping bracket so that it slides between the Guide Shafts (15).
- Slide down and press it on the top of the Can and then release the Handle for Clamping Bracket.
- Now turn the two keys of the Locking Plastic (12) in clockwise direction to clamp the clamping bracket.
- To put some extra pressure on the Can, fix the Fine clamping lever to the Plug for fine clamping lever (10).
- Close the Shutter (3) properly.
- Set the time required to shake the Can depending on size by rotating the Mechanical timer (1) on the front panel of the machine. This will start the machine.
- The machine will stop automatically after the cycle time is over. In case of emergency, press the Emergency Push Button (2) on the front panel to stop the machine.
- When machine stops running completely, open the Shutter and remove the Can.

INTERNAL ASSEMBLY:



TURN ON MACHINE (Connect to power):

Note: The door will not open until the Gyro 525/600/1014 mixer is connected to the building power.

- Ensure the Emergency push button is engaged – push to engage if necessary.
- Plug the mixer into the appropriate electrical receptacle. Ensure the circuit breaker on the left-hand side the mixer, near the top rear corner, is ON.

CAN LOADING:

- Open the Gyro 525/600/1014 Mixer door to its fully open position.
- Ensure the Can Holder Assembly is in the vertical, top dead center (TDC) position, with the Clamp Mechanical Mechanism at the top.
- Referring to the illustrations, open the Can Clamping Bracket as follows:



- Take up the Clamping bracket assembly fully by pressing Handle for clamping bracket as shown in picture.
- Position the Can on the bottom Disc. Using the concentric rings on the Bottom Disc as a guide, ensure the Can is properly centered.



- Clamp the Clamping bracket assembly by pressing Handle for clamping bracket down.
- Rotate Lock for clamping assembly in clockwise direction to tighten the Clamping bracket Assembly.
- For fine clamping of the Can rotate and engage the Fine clamping lever in clockwise direction.
- Close the Shutter to the fully closed position.



MIXING:

Mechanical Timer:

- Set the desired mix time by turning the knob on the Mechanical timer to the appropriate position.
- Gyro will spin for the set time to mix the Paint.

Once the set time has expired, Gyro Assembly will come to a stop.

To STOP the mixer during an emergency situation, push the Emergency push button. The door will unlock.

USE THE EMERGENCY PUSH BUTTON IN AN EMERGENCY SITUATION ONLY.

Note: Always remove the Can from the mixer after the mix cycle has been completed. Follow the UNLOADING instructions below.

UNLOADING THE CAN:

- Open the Gyro 525/600/1014 Mixer Shutter to its fully open position.
- Rotate the Assembly to the vertical, top dead center (TDC) position, with the Handle for clamping Bracket mechanism at the top.

9. PREVENTIVE MAINTAINANCE

9.1 USE OF PLATFORM

Every Gyro 525/600/1014 is having Down Panel (19) platform, which is useful for handling 10 and 20 Ltr Cans.



9.2 REPLACEMENT OF PARTS

After a certain period, may be in accidental break down or due to wear & tear of part, it will become essential to replace few spare parts.

9.3 TOOLS REQUIRED

Allen key set containing 3/16", 5/16", 4 mm, 5 mm, 6 mm, 8 mm, 10 mm and 14 mm Allen keys.

- Fix spanner set containing spanners of 6 to 26 mm size.
- Screw drivers 6", 8", 12".
- Monkey Pliers, Circlip Pliers (Internal & External).
- Nose pliers and Combination pliers.

9.4 REPLACING NEW CLAMPING LEVER & SPRING



Fig 1



Fig 2

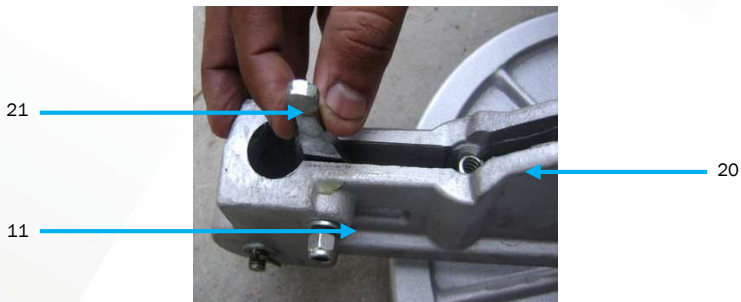


Fig 3

- Remove Stopper on Guide Shafts (14). By pressing Handle for Clamping Bracket (9) take out Clamping Bracket (16) from Guide Shaft (15) as shown in fig1.
- Place it on flat surface & lift the Handle for Clamping Bracket. Remove the Spring for clamping lever (20) from socket provided on Clamping Bracket as shown in fig 2 & fig 3.
- Two Clamping levers are fixed on bracket by locking pins. Unscrew the Nylock nut (11). Remove locking pin & Clamping lever.
- Put new springs in socket & also replace Clamping lever (21) with new one. Screw the Locking Pin. Assemble the handle by inserting the levers in the slots of the handle.
- Again, press the Handle for Clamping Bracket & insert Clamping Bracket into Guide Shafts & fix the Stopper for Guide Shaft.

9.5 REPLACEMENT OF BELTS

There are two types of belts used in Gyro 525/600/1014

9.5.1 V-BELT (22) MAIN WHEEL TO MOTOR PULLEY (GYRO 600 – A87, GYRO 525 – A79, GYRO 1014 – A66)



Fig 1



Fig 2



Fig 3

- Insert the Screwdriver on the left side of the Main wheel (7) and pull the belt slightly outwards as shown in fig1.
- Now to remove the belt rotates the Main wheel clockwise.
- To put the belt back, pass the belt on the Main motor pulley and the Main wheel and rotate the Main Wheel clockwise as shown in fig 3.

9.5.2 V-BELT (24) BOTTOM DISC TO FIX PULLEY

(GYRO 600 – SPZ1750, GYRO 525 – SPZ1400, GYRO 1014 – SPZ 1400)

The Following Figures illustrates the way to replace V Belt, PU belt or Rope Belt



Fig 1



Fig 2



Fig 3



Fig 4

- For changing V-belt (Bottom disc – Fix Pulley), we have to remove the main wheel V-belt as explained in chapter 10.1
- Insert the Screwdriver into the grooves of bottom disc and rotate the disc in opposite direction. (fig 2)
- Now remove the belt from Guide pulley (25) fixed to Main wheel.(Fig 3)
- After removing belt from Guide pulley, remove it from Main wheel.
- While putting new belt, insert it in the Main wheel first.
- Then insert the belt in Pulley, then insert it in the Oval shaped space on Main wheel to Bottom disc. (Fig 4).

9.6 REPLACEMENT OF RUBBER LINING

Top disc is provided with soft plain rubber lining. The driving disc (Bottom Disc) & Single adapters are provided with grooved Hard rubber lining.

- Remove the Bottom disc by removing Hex Bolt at center of disc.
- Pull out damaged lining with the help of screwdriver.
- Clean the surface of disc by using emery paper.
- Use adhesive to fix new linings.
- Put the lining on disc & match the holes of lining with disc.
- Replace the lining of the Single adapter in the same manner.

9.7 MINIMUM SPARES REQUIRED

- V Belt.
- Clamping Lever and Spring for Clamping lever.
- Rubber lining for Top Disc.
- Rubber lining for Bottom Disc.
- Rubber lining for Single Adapters.
- Printed Circuit Board.

10. MAINTENANCE AND TROUBLESHOOTING

Gyro 525/600/1014

Monthly Maintenance: or Ordinary Maintenance

- Always keep the Machine clean.
- Accidental spillage of the paint must be cleaned then and there to avoid difficulties after it gets dried-up.
- Apply a light layer of general-purpose grease over the Guide Shafts once a week.
- Always slide Clamping bracket by pressing Handle for clamping bracket.
- Please check bottom rim of Cans before loading to Machine.
- Do not load damaged Paint containers.
- Always ensure proper tension of Belts to reduce mixing time.


Note: Apply grease on Guide shaft of EP 90 Lithium base

TROUBLESHOOTING:

PROBLEM	TROUBLE SHOOTING
Machine is not turning on or Not rotating	<ul style="list-style-type: none">▪ Check the Mains supply.▪ Check MCB Position, it should be ON.▪ Check the Power supply▪ Check plug or loose wire.▪ Check Motor belts.
Machine vibrates during operation or Not remains stable	<ul style="list-style-type: none">▪ Check the floor on which machine has been installed.▪ Check the floor surface, it should be on plain surface.▪ Otherwise put packing below the legs.
Main Motor not running / working	<ul style="list-style-type: none">▪ Check Emergency push button▪ Check Motor Mechanism and▪ Motor capacitor.▪ Check input supply.
Machine makes a loud noise after every revolution	<ul style="list-style-type: none">▪ Check the foundation of the Motor.▪ Check the tension of the belt joining the Motor pulley and the Main Wheel. If found loose, adjust it to the proper tension.▪ Check whether the belt has worn out. If yes, then replace the same with a new one.
Container clamped does not rotate along its axis even though the machine is rotating.	<ul style="list-style-type: none">▪ Check the "V" belt for proper tension.▪ If the belt is found loose then replace the same with a new one.
Clamped container becomes loose	<ul style="list-style-type: none">▪ Tighten handle for sprocket properly.▪ Tighten Lock/Unlock handle (Locking Plastic).
Clamping bracket does not slide smoothly.	<ul style="list-style-type: none">▪ Clean the Guide Shafts and apply the general-purpose grease.
Machine is giving shock while in operation	<ul style="list-style-type: none">▪ Check for proper grounding. If the▪ Earthing is not proper consult an▪ Electrician.
Timer Failure	<ul style="list-style-type: none">▪ Check Power ON▪ Rotate Timer Knob▪ Reset Knob

Note: Shutter will not open when the Power is OFF.

ADJUSTING TRANSMISSION BELTS:

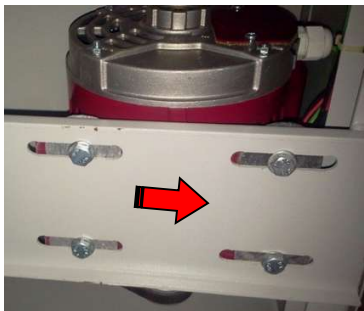

Remove Cover for Motor from the machine.


Check belt tension, which should bend 5 – 10mm while pressed with fingers in its side.

To Correct the tension, set the bolt with motor as shown in the picture.

Check the belt by rotating the main pulley. The belt should not be worn.

Put the back panel in its original position.

11. SCHEMATIC DIAGRAM

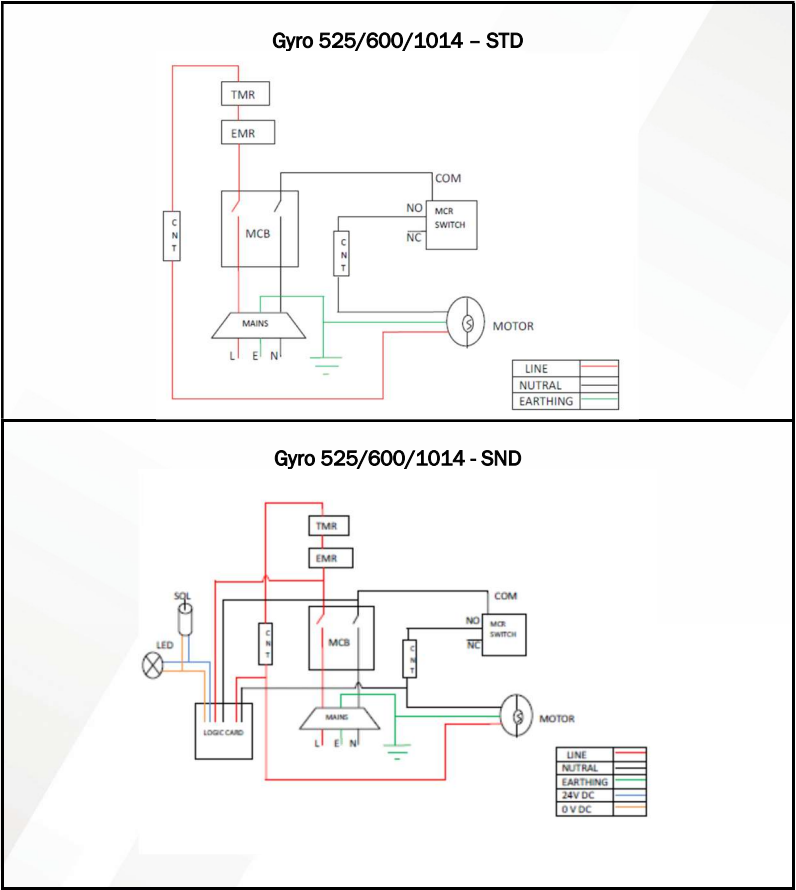

12. REFERENCE LEGEND

Ref. No.	PART DESCRIPTION
1	Mechanical timer-5 min. H\E032
2	Emergency push button H\E033
3	Emergency push button with key H\E010
4	MCB C10 1P H\E007
5	Micro switch (Door limit switch) H\E015
6	Rubber lining for universal adaptor H\0009
7	Rubber for bottom disc H\0026
8	Rubber lining for top H\0056
9	Clamping lever H\G003
10	Spring for clamping lever F\H133
11	Guide shaft H\G034
12	Stopper for guide shaft H\G043
13	Handle for clamping bracket-415 H\B070
14	Fine clamping lever H\G008
15	Can remover plate H\B039
16	V-belt A-67 (Main wheel- Motor pulley) F\H326
17	V-belt A-79 (Main wheel- Motor pulley) F\H129
18	V-belt A-87 (Main wheel- Motor pulley) F\H130
19	V-belt spz 1400 (Bottom disc- Fix pulley) F\H131
20	V-belt spz 1750 (Bottom disc- Fix pulley) F\H132
21	Foot M16 H\0048
22	Locking mechanism assembly H\A001
23	Top disc assembly H\A002
24	Guide pulley assembly H\A013
25	Bracket for guide pulley assembly H\A015
26	Single adaptor assembly H\A016
27	Clamping bracket 415 assembly H\A017
28	Shutter 590 assembly H\A021
29	Shutter 615 assembly H\A022



Thank You

PHOENIX[®]
INDIA

Phoenix Mixer India Pvt. Ltd.

Plot No 7, College Road, Vadkun, Dahanu Road- 401602

Dist: Palghar, Maharashtra, INDIA

Phone: + 91-9422309771 | www.phoenixmixer.com

An ISO 9001:2015 Certified Company